


Typical Installation:

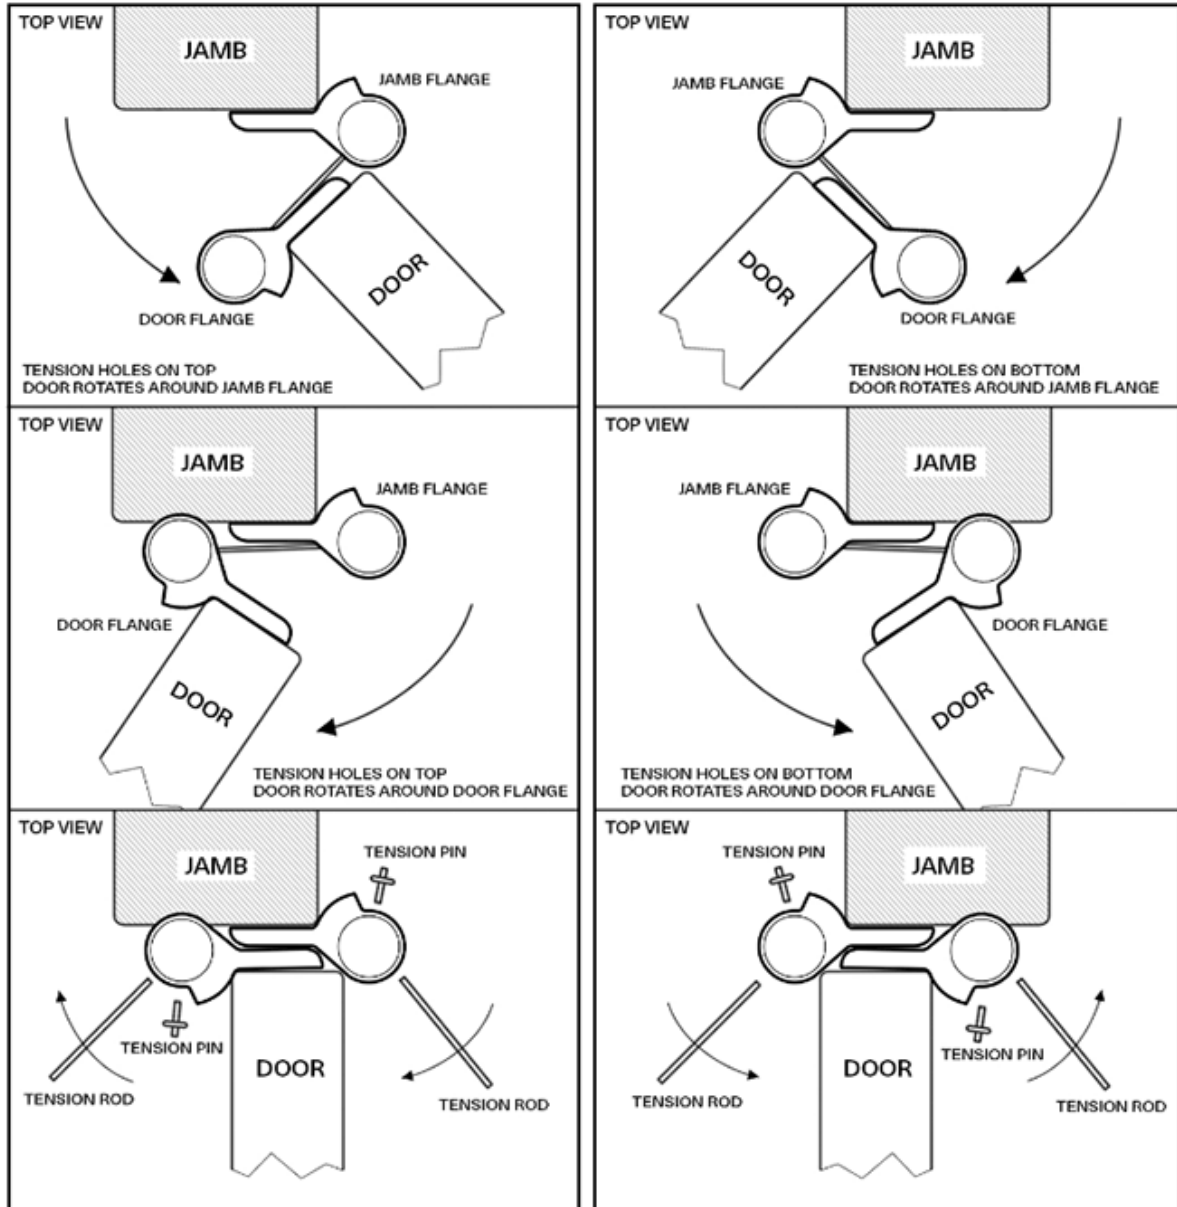




1
Release the screw before install, remain screw un-elastic status.



2
Do marking on the door frame and lock the screw.

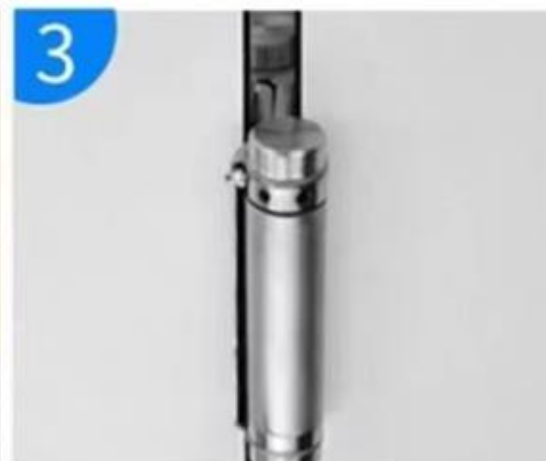

3
Install suitable quantity of door hinges (According to the door size).



4
Install another side and lock the screw.



5
Screw in the adjuster bar to adjust the hinges speed,after adjustment, lock with adjuster pin.



6
Complete