

INSTALLATION INSTRUCTION FOR "SNAKE" LOCK CYLINDERS

- high quality furniture fittings



1. Remember the red interchangeable key.

2. Make sure that the arrow on the blue plastic plug is pointing towards the locking latch.



3. Pull out the blue plastic plug from the lock body. Make sure that the locking latch stays in the same position (protruding slightly)

4. Keep the transparent tube on the cylinder. Replace the black keys with the red key.




5. When red key is inserted into the cylinder, pull off the transparent tube.



6. Before inserting the cylinder, make sure that the female part inside the lock body and the male part on the tip of the cylinder are matching.

7. Install the cylinder in the lock body.

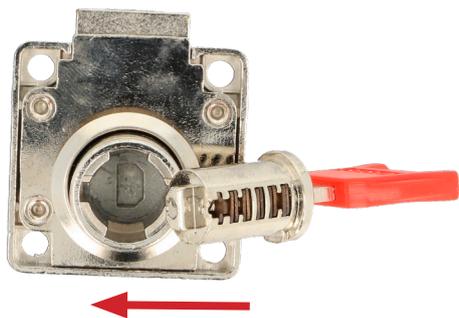

8. Turn the red key.



9. Pull out the red key.



10. Insert the black key into the lock. Turn the key to check if the lock is functioning correctly. The lock is now ready to be used.

